


ADB BOX AND REMOTE CONTROL

ADB-3721WN

Advanced high definition,
IPTV set-top box with over-the-top
video and home networking capabilities

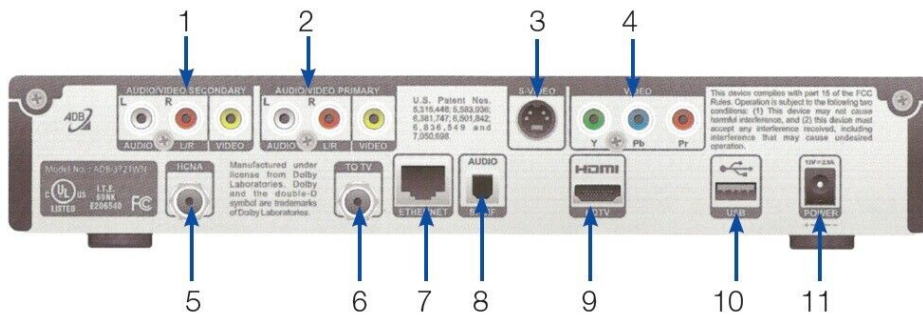

1.Audio Video Secondary (To TV Video/Audio Out)

8.Digital Audio Output

2.Audio Video Primary (To TV Video/Audio Out)

9.HDMI

3.S Video

10.USB Port

4.Component Output

11.Power

5.HCNA Port

6.RF Output

7.Ethernet Port

ADB BOX AND REMOTE CONTROL



Program Your Remote

Searching for your device code? If your home entertainment device does not respond to your remote, try searching for your product codes.

To search for your code:

1. Turn on Your TV
2. On the remote control, press the “TV” button once; it will blink once. Then press and hold the “RCU SETUP” button until the “TV” button blinks twice.
3. Type “9” “9” “1”. The “TV” button will blink twice.
4. Aim the remote control at the TV and press the POWER button once.
5. Press and release the “CH+” (channel UP) button continuously, then stop when your TV turns off.
(note: In the search mode, the TV button will blink while searching for the correct TV code.)
6. Press the RCU SETUP once to lock-in the code.
7. Press the STB button once.
8. Press the TV button once.
9. Press the POWER button once. The TV set should turn on.
10. To search for the codes of your other devices, repeat the previous steps, but substitute the appropriate key (“AUD,” “DVD” or “AUX”) for the device you are looking for.

Scan QR Code To Watch YouTube video or copy link below.

<https://youtu.be/TpY8u67l6Bw?si=Vpdu6tSlzrVQsfmg>



Congratulations! You’ve programmed your remote control!

ADB BOX AND REMOTE CONTROL

Troubleshooting & Solutions

Remote Control Issues

Problem: Remote blinks, but device doesn't respond.

Solution:

- Replace the batteries (2 AA).
- Make sure the device is programmed into the remote.
- Press the correct button for the device you're trying to control.

Power Issues

Problem: No power.

Solution:

- Make sure the power cord is plugged into a working outlet.

Sound Issues

Problem: No sound.

Solution:

- Press the **Mute** button.
- Check if audio cables are properly connected.

Picture Issues

Problem: No picture.

Solution:

- Check that all cables are plugged in securely.
- If using a coax cable, try switching to **Channel 3 or 4**.

Problem: No picture or sound.

Solution:

- Make sure all cables are connected properly.
- Ensure the **Set Top Box** is turned on (green light should be on).
- Check if the TV is on the right input/source (try using the **Input** button).
- If the problem continues, unplug the Set Top Box and plug it back in (wait 5 minutes).

ADB BOX AND REMOTE CONTROL

Channel & Language Issues

Problem: Some channels are in Spanish or have no sound.

Solution:

- Press **Menu** → **Settings** → **Hardware Settings** → **Audio**.
- Set **Primary & Secondary Language** to **English**.

Problem: Some channels are blocked.

Solution:

- Check **Parental Control** and **Channel Blocking** settings in the menu.

DVR & Recording Issues

Problem: DVR recordings don't show on another TV.

Solution:

- Make sure you have **Whole Home DVR Access**.
- Restart your **DVR Set Top Box** (unplug and plug back in).

Problem: VCR won't record.

Solution:

- Ensure all cables are properly connected.
- Make sure the TV is on the correct channel.

TV Guide & Menu Issues

Problem: OK button doesn't work in the Guide.

Solution:

- Press **Exit** and try again.

Problem: Menu, Guide, or Info button doesn't work.

Solution:

- Press the **STB** button (upper right on the remote) and ensure it lights up.

Other Common Problems

Problem: TV says "No Signal."

Solution:

- Press the **Input** button on the remote until the picture comes back.

ADB BOX AND REMOTE CONTROL

- If that doesn't work, use the **Input/Source** button on the TV itself.

Problem: Pausing Live TV doesn't work.

Solution:

- Some TV boxes (like **3800 models**) don't support pausing live TV.

Problem: Restart TV doesn't work.

Solution:

- Restart TV only works on channels that show a **green circle clock** in the guide.

Problem: What does the **RES** button on the box do?

Solution:

- It changes the resolution settings on your box.

ADB REMOTE CONTROL CODES FOR TV BRANDS

Hisense	3519, 2183, 0748, 1314, 1660, 2098
Insignia	2049, 1641, 1326, 1564, 1423, 2002, 1785, 1892, 2184, 2417, 2751, 0171, 0463, 2088, 1963, 1660, 1517, 1385
LG	1423, 2731, 2358, 2424, 0178, 3397, 1265, 2834, 2098, 2612, 0017
Panasonic	1480, 1291, 0250, 0650, 2264, 1927, 1924, 1947, 0051, 1941, 1310, 1271, 1946
Phillips	1454, 1867, 2372, 1744, 1455, 2374, 2597, 1866, 0690, 0054, 2704, 1394, 0171, 1365, 1944, 1990, 2902
RCA	1447, 2746, 2434, 2932, 2247, 2187, 0047, 1781, 0093, 3577, 3147, 2855, 2002, 1959, 1547, 1385, 1347, 0679, 0051, 1661
Samsung	2051, 0812, 0702, 0060, 1060, 0766, 0814, 1959, 1596, 0650, 0178, 0056
Sceptre	0878, 1217, 1360, 1599, 2337, 2506, 2528
Sharp	2360, 0818, 0093
Sony	0810, 0000, 0834, 130, 685, 1904
TCL	2434, 3183
Toshiba	1524, 1656, 2724, 0156, 1156, 0822, 1256, 2006, 006, 0154, 1265, 2684, 1959, 1945, 1704, 0650, 1369
Vizio	1758, 3758, 2757, 3358, 2512, 1756, 0864, 0885