

Programming Your ADB Remote

Remote Control Guide

- **Power Button** – Turns the TV or device on/off.
- **Device Buttons** – Control other devices (like a set-top box).
- **Playback Controls** – If using an ADB 5721wnx recorder, play, pause, or rewind recorded shows.

Navigation & Menus

- ▲ **Arrow Keys** – Move around menus and the guide.
- **Guide** – Opens the program guide.
- ⚙ **Menu** – Opens TV settings.
- i **Info** – Shows details about the current show or menu item.
- ✕ **Exit** – Closes menus and returns to TV.

TV Controls

- 🔊 **Volume (+/-)** – Adjusts sound level.
- 📺 **Channel Up/Down** – Changes channels one at a time.
- 📖 **Guide Navigation** – Moves up/down by five channels when inside the guide.
- 🔇 **Mute** – Silences the sound.
- 🔄 **Last** – Returns to the last channel watched.
- 1234 **Number Pad** – Enter a channel number directly. Press **OK** to switch channels (the number appears on the screen for a few seconds).

Programming remote to ADB Box

Scan QR Code To Watch YouTube video or copy link below.

<https://youtu.be/TpY8u67l6Bw?si=Vpdu6tSlzrVQsfmg>

